

MOTORIZED

MOTORIZED



ZP5088 2 in 1 Car Troubleshooting Guide

Please follow the directions in the attached service guide to check the conditions on your ride. Most times it is a loose plug or switch causes electric ride to stop working.

Keep in mind the ride will not operate if the power adaptor cable is plugged into the ride and plugged in and damage it.

Disconnect the charger from the car before trying to operate

To rule out a faulty fuse:

1. Under the seat in the battery compartment please disconnect the short cable from the red terminal of the battery
2. Then disconnect the cable that comes from the ride onto the fuse
3. Connect this cable directly to the red terminal of the battery.

So what you have left over is the small black fuse and a short cable attached to the battery. This is bypassing the fuse, try this to see if it is in fact a faulty fuse.

If you have a ride on that is 18+ months old and after following these directions you cannot get it going we recommend removing the battery and having the battery & charger tested by a professional.

Batteryworld.com.au offer this service over the counter in your local outlet.

TROUBLE SHOOTING GUIDE

Item#: 4096_ZP5088

Description: 6V PJ Masks Gekko Car with parent handle



step1



step2



step3



step4

1. Per above steps to check the connection of Forward/Reverse and ON/OFF switch



step1



step2




step3



step4



step5

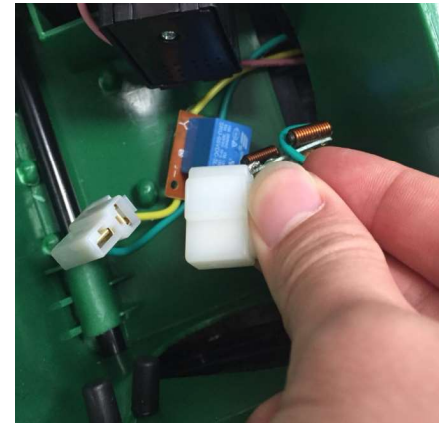

step6

2. Per above steps to check the pedal wiring connection, battery connection and gearbox connection.



step1



step2

3. Per above 2 steps to switch the car function in push mode or electric mode, details please check owner's manual.

Please pay attention to safety during installation and disassembly.




Hunter
Products


MOTOR PLUG – PIN TROUBLESHOOT

No. Pin pushed to side.

When plugged together the pin is not connecting with other plug.

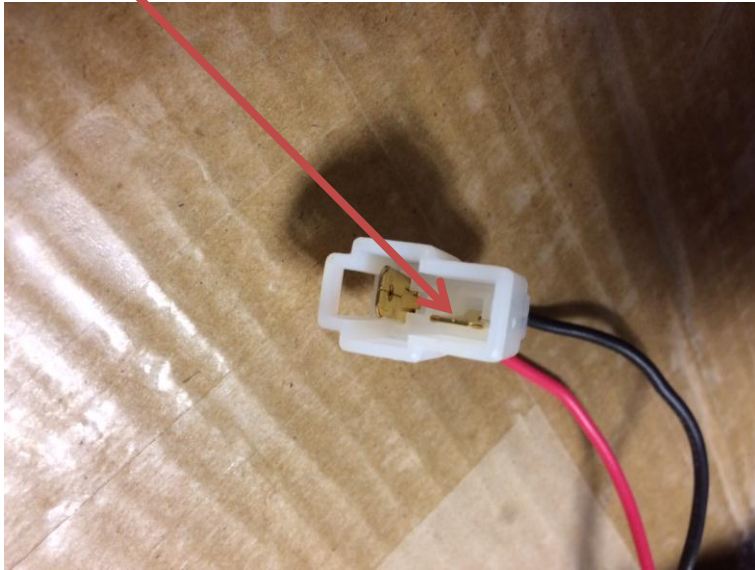

Yes. Pin is central.

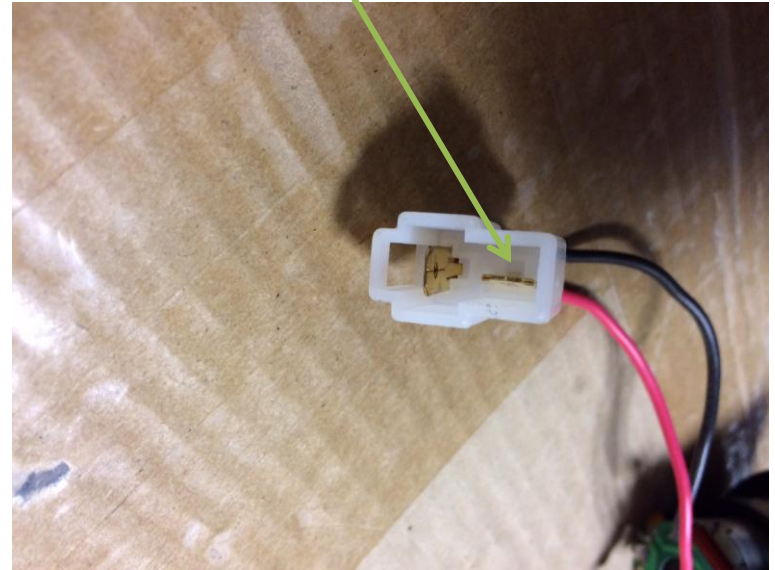

MOTORIZED