 


6V Children ATV

Assembly & Instruction Manual

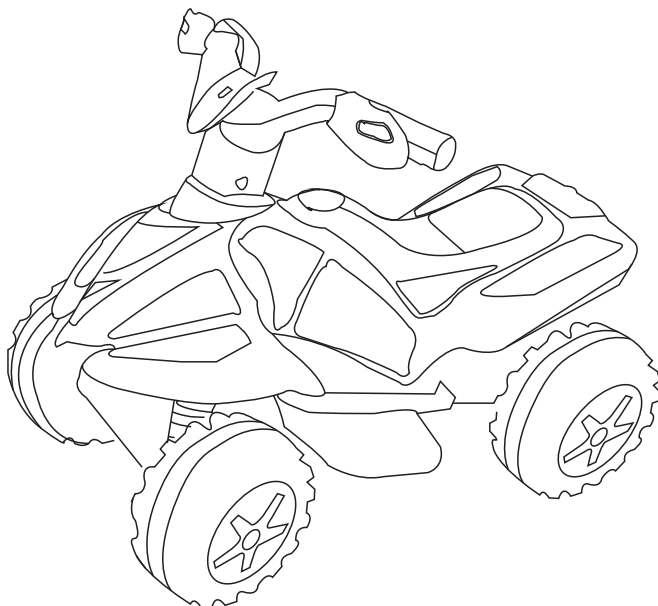

- Maximum user weight: 20kg
- Item No.: #5738 #5721
- Model No. : TR1002
- Continuous adult supervision required when using this product.
- Suitable for 18months-36months
- Always wear a helmet when riding.
- Adult assembly required
- Before each use, charge the battery for at least 10 hours.
Charging of battery should only be done by an adult.
- Please keep this manual for future reference as it contains important information

Made in China













Warning: Vehicle must be charged fully before use
Failure to do so voids warranty

- 1.SPECIFICATIONS**
- 2.THE LIST OF PARTS**
- 3.ASSEMBLY PICTURE**
- 4. FUNCTION OF MOTORCYCLE AND CIRCUIT
DIAGRAM**
- 5.FUSE**
- 6.CHARGING THE VEHICLE**
- 7.TROUBLE-SHOOTING GUIDE**
- 8.MAINTAINING YOUR VEHICLE**
- 9.SAFETY PRECAUTIONS**
- 10.DISPOSAL OF BATTERY**


1.SPECIFICATIONS

Suitable age: 18months-36months		Battery:	DC6V 4.5AH X 1 Set Battery
Capacity: 20kg		Size of car:	62 X 37 X47CM
Speed: 2.5 km/h		Charging Times:	300 Times
Charger:	Input:240V 50/60Hz	Fuse:	F 5A 240V
	Output:DC 6V 500mA		



2.THE LIST OF PARTS

Wheel X4 	Front axle $\varnothing 375\text{mm}$ 	Rear axle $\varnothing 385\text{mm}$ 	Front-wheel bracket 
M10 nut X4 M10 Washer X7 F4X12 screw X2 	Gear box 	Seat 	Front cover 
Body 	Handle bar 	M5X50 Bolt M5 Nut 	Charger 

 3.ASSEMBLY PICTURE

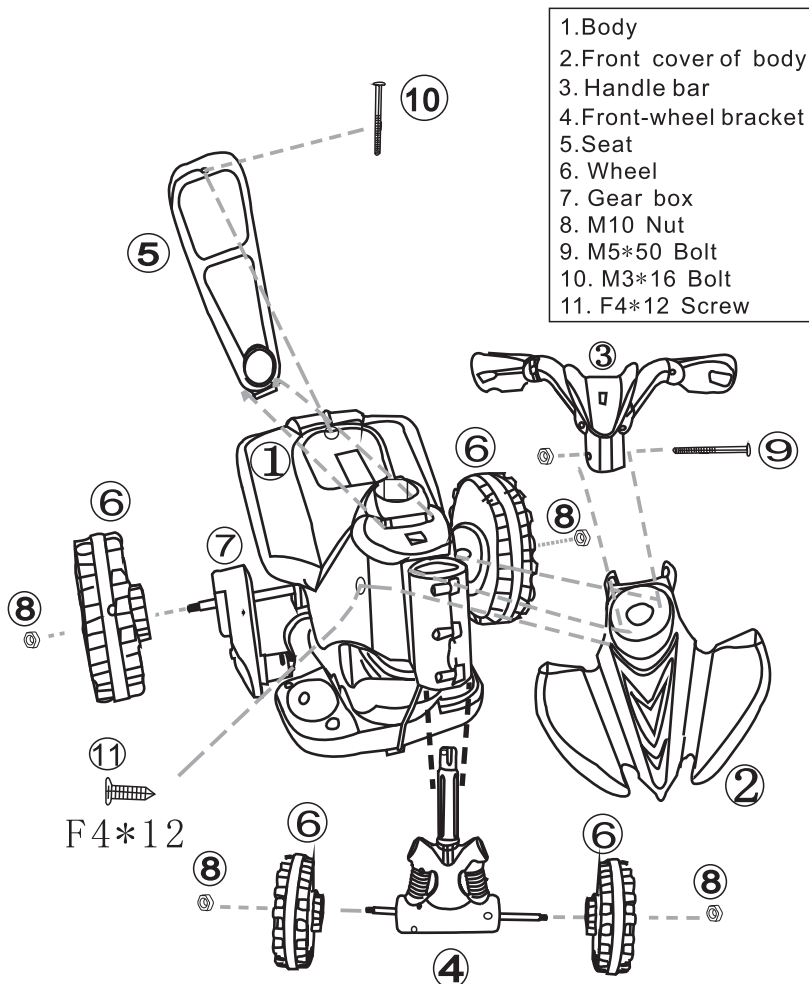

ASSEMBLE REAR WHEEL:

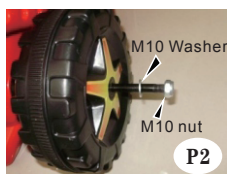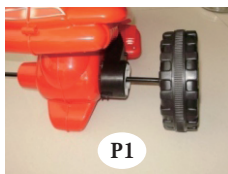  


- Put the rear axle through one rear wheel,gear box & vehicle body, put the gear box match the vehicle body and rear wheel very well. (P1)
- Tighten the out side of this assembled wheel with a M10 washer and a M10 nut.(P2)
- Assemble the left rear wheel with one M10 washer inside and one M10 washer & one M10 nut outside ,then tighten the M10 nut. (P3.4.5)

ASSEMBLE FRONT COVER:



- Match and plug the front cover onto the front vehicle body,tighten it with two F4X12 screws. (P6.7)

 ASSEMBLE FRONT WHEEL:

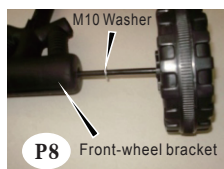


- Put the front axle through one of front wheel,one M10 washer and front-wheel bracket,then tighten the out side of this wheel with a M10 washer and a M10 nut.(P8.9)



- Assemble the another front wheel same as the first. (P10)
- Put the front-wheel bracket assembled with front wheel through the hole at front part of vehicle body from the vehicle bottom, then shake it to ensure work smoothly. (P11. 12)

 ASSEMBLE HANDLE BAR:

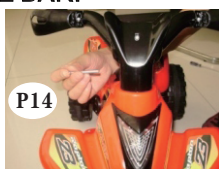

- Plug the handle bar onto the front-wheel bracket, fix it with the M5X50 bolt and M5 nut. (P13.14)

Before using the vehicle, confirm the following has been completed:

- The vehicle has been fully assembled according to the steps that the manual described.
- The battery has been inserted correctly and the vehicle has been charged for at least 10 hours.
- That all screws are tightened
- Teach appropriate safety rules to your child before allowing them to use the vehicle.

Reduce the risk of injury:

- Direct adult supervision required.
- Always wear shoes.
- Do not exceed the maximum user weight of 20kg.
- Keep children within safe user areas.
- Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other sources of water.

4. FUNCTION OF MOTORCYCLE AND CIRCUIT DIAGRAM

1. Introduction of the functions

- (1) Forward and Reverse switch
- (2) Pedal switch

FORWARD

1. Press the " Forward and Reverse switch "
- to the " Forward " position.
2. Press the pedal.
3. The vehicle drives forward.

STOP

 
1. To stop remove foot from the accelerator pedal.

REVERSE

1. Press the " Forward and Reverse switch "
- to the " Reverse " position.
2. Press the pedal.
3. The vehicle drives backward.

TURN THE POWER OFF


Press the " Forward and Reverse switch " to center position.

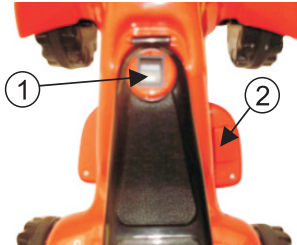

NOTICE :


- Make sure you come to a complete stop before changing directions from forward to reverse.
- Not doing so will cause damage to the gearbox/motor.

 2. Circuit diagram

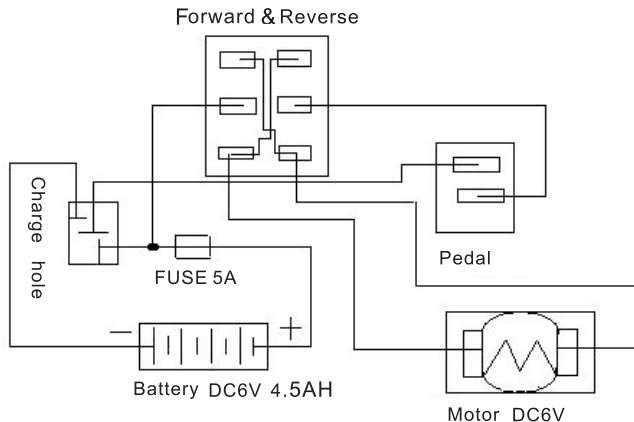

5.FUSE

 The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 15-20seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

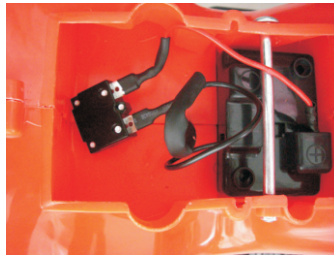

To avoid electric shock, follow these guidelines:

- DO NOT overload the vehicle. The maximum user weight is 20kg.
- DO NOT tow any thing behind the vehicle.
- DO NOT drive up steep slopes.
- DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- DO NOT drive in very hot weather, components may overheat.
- DO NOT allow water or other liquids to come in contact with the battery or other electric components.
- DO NOT tamper with the electric system. Doing so may create a short circuit, causing the fuse to trip.

6. CHARGING THE VEHICLE

- The charging socket is at the left side of the vehicle body.
- Press the forward/back switch to the center to turn the power off.
- Open the seat, connect the battery plug, red to red black to black.

Plug the charger into a 240V mains power wall outlet.

Before the first use, you should charge the battery for 8-10 hours. Do not recharge the battery for more than 20 hours to avoid damage to the battery and charger.

- Never drain battery completely or to a crawling speed, recharge the battery when a decrease in speed and power is noticed warranty will be voided if misuse has occurred.
- After each use or once a month minimum, recharge for 8 to 12 hours, 20 hours maximum



To recharge the battery: Put the Forward/ Reverse switch to the center to turn the power off

- Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.

- Do not short circuit the battery.
The charger and the battery are not a toy. Do not allow children to play with the charger and the battery.
- Only use the battery and charger specified by the manufacturer.
- Do not open the battery and charger.
- Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over
- The battery must be handled by adults only. The battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could result in serious injury.
- Do not allow the battery to drain completely, recharge the battery after each use or once a month, if not used regularly.
- Before charging the battery check for wear or damage to the battery, charger, the connectors and other parts. If any damage is found, charger should be repaired or replaced immediately. Do not use a damaged charger.
- It is normal for the adaptor to feel warm during charging, but if the charger feels very hot, stop charging and check the battery and adaptor.

7.TROUBLE-SHOOTING GUIDE

Problem	Possible Cause
(1). The 6-volt battery will not recharge	1. Battery connector is loose. Make sure the battery connector is firmly plugged in. 2. The 6-volt battery will not recharge. Make sure the charger is plugged into a 240V wall outlet and the power flow to the outlet is on. 3. Charger is not plugged in. Make sure the charger is plugged into a 240V wall outlet and the power flow to the outlet it turned on 4. Check and replace fuse if necessary
(2). The vehicle does not run	1. The battery may be low on power. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours. 2. Motor connector or wires are loose.

(2). The vehicle does not run	<p>3. Battery is dead. Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced. Contact Hunter Products Customer Service for assistance on 1800 224 094</p> <p>4. Electrical system is damaged. Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch. Check.</p> <p>5. Motor is damaged. Contact Hunter Products Customer Service for assistance on 1800 224 094</p>
(3). The vehicle does not run very long.	<p>1. Battery may be undercharged. You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours.</p> <p>2. Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new 6-volt battery Available through Hunter Products Customer Service for assistance on 1800 224 094</p>
(4). Battery buzzes or gurgles when charging.	<p>1. This is normal and not a cause for concern. It may also be silent when charging, which is also normal.</p>
(5). The vehicle runs sluggishly	<p>1. Battery needs recharging. After each use, or once a month minimum, charge the battery for a "full" 10 hours. Never charge the battery longer than 20 hours.</p> <p>2. Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for 1 to 3 years. Replace the battery with a new 6-volt battery Available through Hunter Products Customer Service for assistance on 1800 224 094</p> <p>3. Vehicle is overloaded. Maximum user weight is 20kg. DO NOT overload the vehicle. DO NOT tow anything behind the vehicle.</p>

8. MAINTAINING YOUR VEHICLE

- It is a parent's responsibility to check main parts of the vehicle before using. Regularly examine the vehicle for potential hazards, such as; the battery, charge cable and cord, plug and ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels and the steering linkages.
- Keep the vehicle in an upturned position, do not overturn or incline it. It is recommended to store the vehicle indoors when not in use. If stored outdoors, the vehicle needs to be covered by a tarp for protection against weather elements.
- This toy should be kept away from fire. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt. While charging ensure all flammable liquids are well away from the vehicle.
- **ADULTS ONLY:** recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used.
- Use a soft, dry cloth to clean vehicle.
- **DO NOT** use chemical liquid to clean the plastic surface of the vehicle.
- **DO NOT** wash the vehicle with soap and water.
- **DO NOT** drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- When not in use all the electrical source should be turned off. Press the forward/back switch to center to turn the power off. and disconnect the battery connection under the seat.
- Please do not change the structure of this product and circuit system.
- Do not use the vehicle for other purposes except riding.

9. SAFETY PRECAUTIONS

SAFETY CHECK

1. While riding, adult supervision is required at all times.
2. Always wear a helmet when riding.
3. Do not drive near roads or on the footpath.
4. It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15 degrees.
5. It is recommended to ride this vehicle on smooth surfaces only.
6. Do not use this vehicle outdoors when it is raining
7. Make sure you come to a complete stop before changing directions from forward to reverse.
8. Don't allow children to operate the charger or play with the battery.
9. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat. Ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connections of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before riding.
19. Do not let any child touch the wheels or be near them when the car is moving.
20. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
21. Proof of purchase must be given for goods to be returned, repaired or replaced.

10.DISPOSAL OF BATTERY

Disposal of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.

PLEASE NOTE:
IN CASE OF PRODUCT FAULT
DO NOT RETURN THIS PRODUCT
TO STORE. PLEASE CONTACT
Hunter Products Customer Service
TOLL FREE NUMBER:
1800 224 094

FOR CUSTOMER SERVICE OR PRODUCT ENQUIRIES
PLEASE CONTACT Hunter Products Customer Service
TOLL FREE NUMBER: 1800 224 094
MADE IN CHINA