



---

Hunter  
Products

---

---

bloqncfz  
HNUFEL

---

**MODEL B30 YELLOW SPORTS CAR  
SERVICE GUIDE**

Please follow the directions in the attached service guide to check the connections on your ride on. Most times it is a loose plug or switch that causes electric ride's to stop working.

**Keep in mind the ride will not operate if the power adaptor/charger cable is plugged into the ride, this is a safety feature to ensure a child does not take off while it's plugged in and damage it.**

**Disconnect the charger from the car before trying to operate it.**

**To rule out a faulty fuse:**

1. Under the seat in the battery compartment please disconnect the short cable from the red terminal of the battery.
2. Then disconnect the long cable that comes from the ride on wiring to the fuse
3. Connect this cable directly to the red terminal of the battery.



So what you have left over is the small black fuse and a short cable attached to it that are not connected to the ride. This is bypassing the fuse, try this to see if it is in fact a faulty fuse.

***If you have a ride on that is 18+ months old and after following these directions you cannot get it going we recommend removing the battery and having the battery & charger tested by a professional.***



***Batteryworld.com.au offer this service over the counter in your local outlet.***





1. Pls make sure on-off switch is connected firmly as above picture shown.

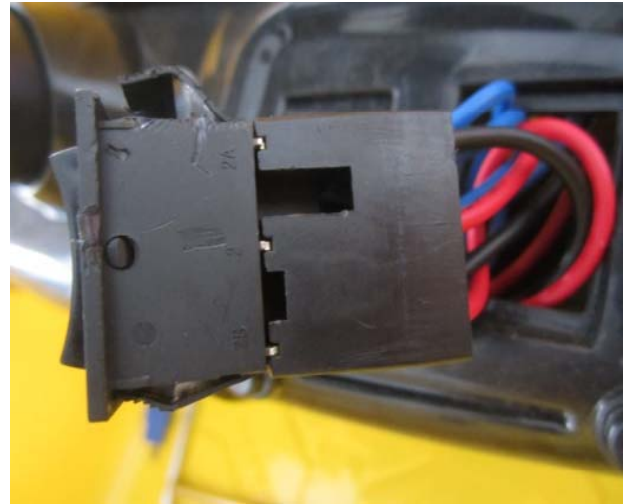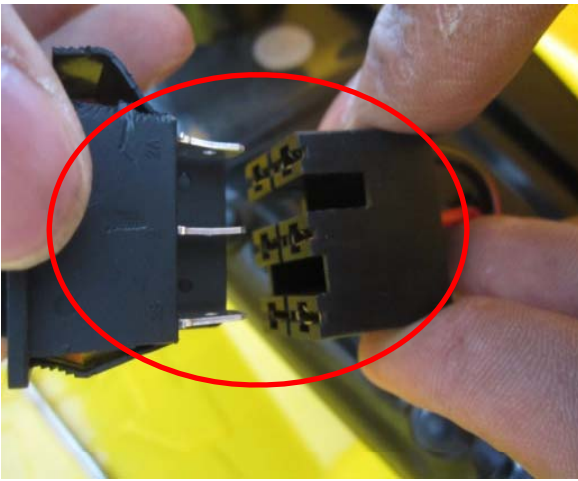

2. Pls make sure forward-stop-reverse switch is connected firmly as above picture shown.

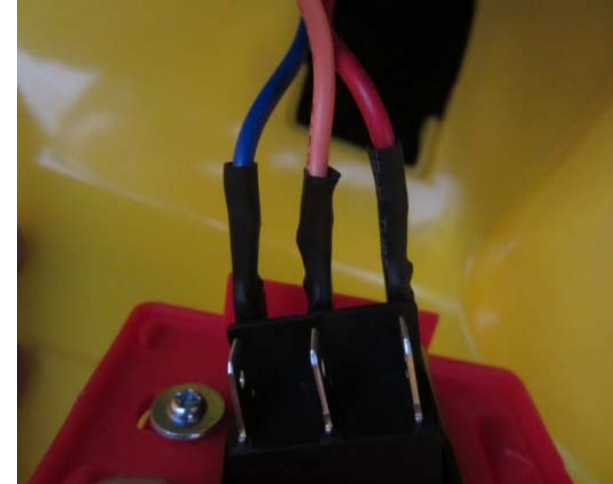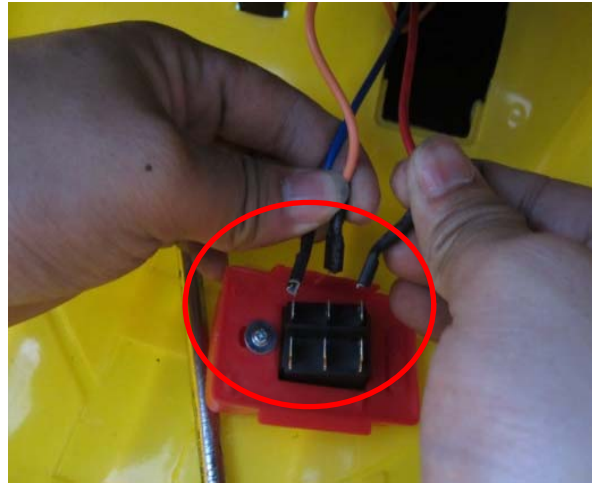


3. The cables connections for pedal switch

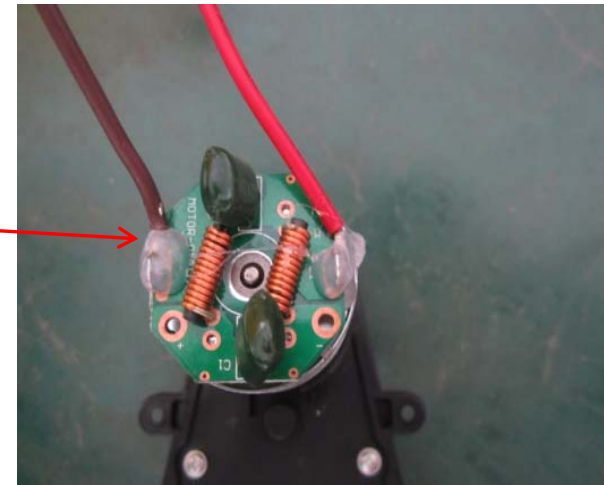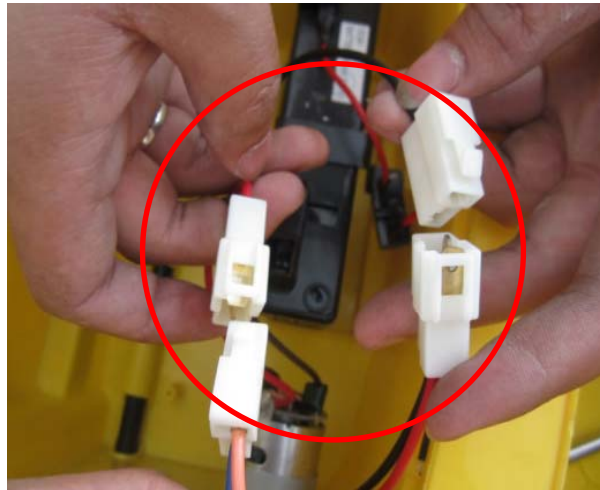


4. Lift the seat to check if the motor box plug is connected to another terminal as picture shown.



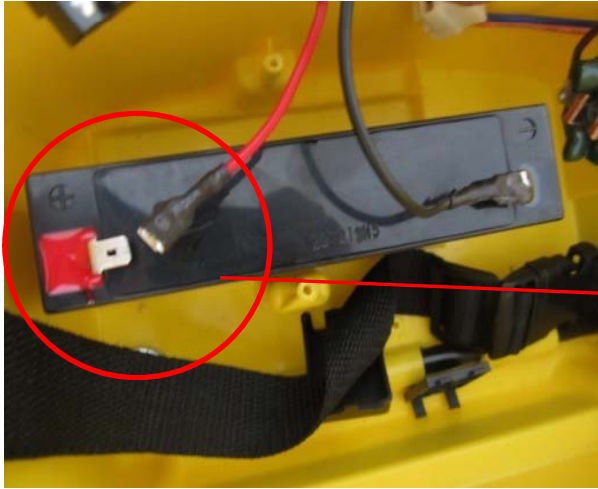

5. Connect the wire to the battery (positive terminal)

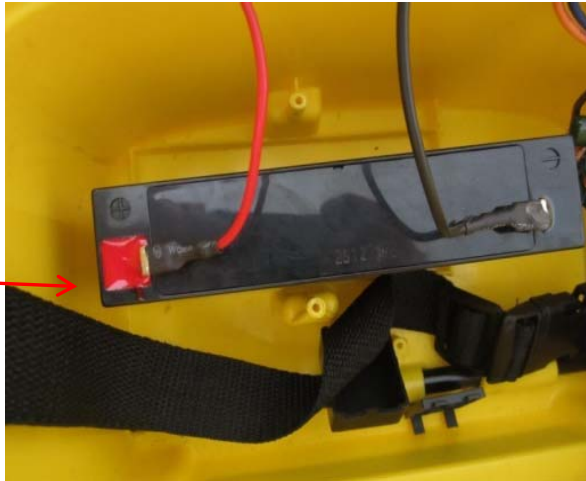

6. The fuse connection



7. Charging