

AGES 3+ YEARS

# 12 Volt Convertible Car



MADE IN CHINA  
ITEM NO.: 5752

# **WARNING!**



## **WARNING:**

To reduce the risk of injury, adult supervision is required.  
Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water.  
Always wear shoes and never allow more than 1 rider.

It is parent's responsibility to check main parts of the vehicle before using. Regularly examine the vehicle for potential hazards, such as: the battery, charge cable and cord, plug and ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.

### • **TO PREVENT FIRE AND ELECTRIC SHOCK:**

- Only use battery and charger provided and specified by manufacturer. Use of the wrong type of battery for charger could cause a fire or explosion.
- **DO NOT** use the battery or charger for any other product.  
Overheating, fire or explosion could occur.
- **NEVER** modify the electric circuit system. Alterations could cause a shock, fire or explosion.
- **DO NOT** allow any type of liquid on the battery or its components.  
Explosive gases are created during charging. **DO NOT** charge near heat or flammable materials. Charge in a well ventilated area **ONLY**.  
Charge the battery in a dry area **ONLY**.
- **DO NOT** open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- **DO NOT** open the charger. Exposed wiring and circuitry inside case may cause electric shock.
- **ONLY ADULTS** may handle or charge the battery. **NEVER** allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- **DO NOT** drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger and the connectors. **DO NOT** charge the battery if any damage to parts has occurred. Replace with manufacturer's parts **ONLY**.
- **DO NOT** allow the battery to drain completely; recharge the battery after each use or once a month if not used regularly.
- **DO NOT** charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if the vehicle tips over. Risk of fire. Do not bypass.
- **If a battery leak develops**, avoid contact with the leaking acid and place the damaged battery in a plastic bag. See information in "Disposal of Battery" for proper disposal.
- **If acid comes in contact with skin or eyes**, flush with cool water for at least 15 minutes and call a physician.
- **If acid is internally ingested**, give water, milk of magnesia or egg-white immediately. Never give emetics or induce vomiting. Call a physician.

 
 
 

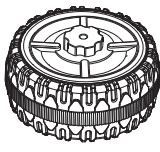 

 
 

 
 
 

 


 

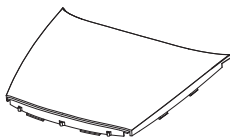 
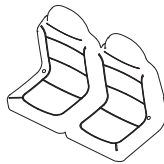 
 

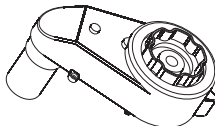 
**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.**

**PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

 
 
## Tools required

Philips head screwdriver  
Pliers  
Adjustable wrench
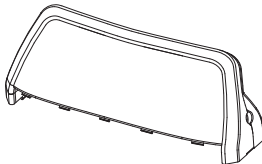
## Component List

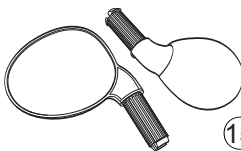Main body×1		Windshield×1		Chrome wheel cap×4	
 ①		 ②		 ③	
Front wheel×2		Rear wheel×2		Wheel bushes×2 Inside diameter 12mm outside diameter 16mm	
 ④		 ⑤		 ⑥	
12mm Washers×2		10mm Washers×4			
 ⑦		 ⑧			
Steering wheel×1		5mm×35mm Steering fixing bolt×1		5mm Lock nut×1	
 ⑨		 ⑩		 ⑪	
Wrench×2		4mm×16mm Circular self-tapping screws×2			
 ⑫		 ⑬			
10mm Lock nut×4		4mm×12mm Circular self-tapping screws×6		4mm×16mm Flat self-tapping screws×4	
 ⑭		 ⑮		 ⑯	
Rearview mirror×2		Battery charger×1			
 ⑰		 ⑱			
Hood×1		Seat×1		Cover plate under the seat×1	
 ⑲		 ⑳		 ㉑	
Hood trim strip×1		Gear box×2			
 ㉒		 ㉓			

**PLEASE NOTE:** IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.  
PLEASE CONTACT **HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

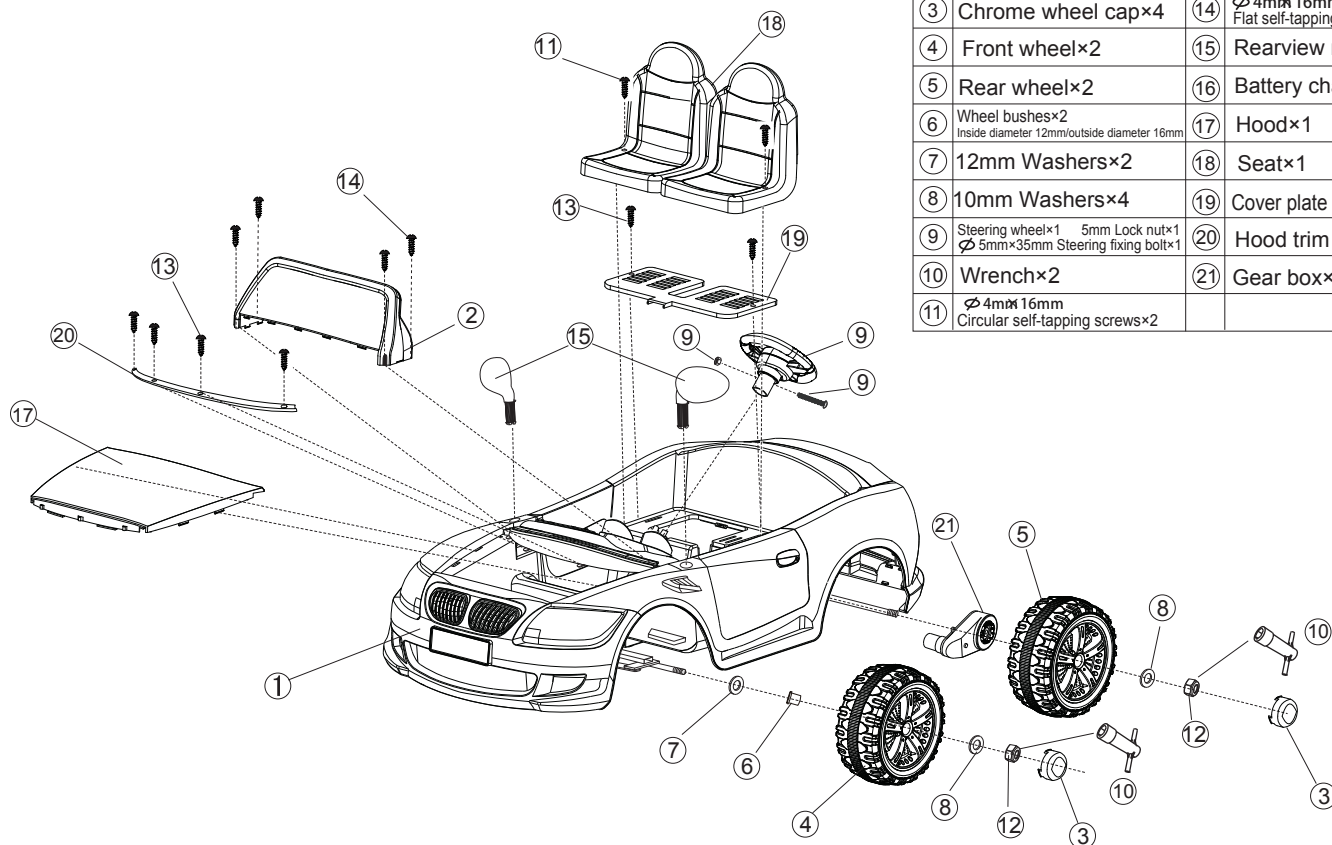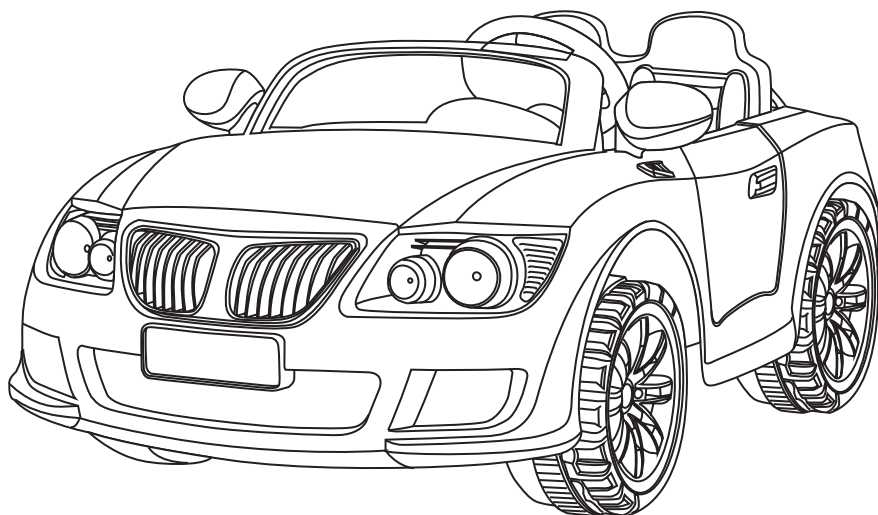

① Main body×1	⑫ 10mm Lock nut×4
② Windshield×1	⑬ $\varnothing 4\text{mm} \times 12\text{mm}$ Circular self-tapping screws×6
③ Chrome wheel cap×4	⑭ $\varnothing 4\text{mm} \times 16\text{mm}$ Flat self-tapping screws×4
④ Front wheel×2	⑮ Rearview mirror×2
⑤ Rear wheel×2	⑯ Battery charger×1
⑥ Wheel bushes×2 Inside diameter 12mm/outside diameter 16mm	⑰ Hood×1
⑦ 12mm Washers×2	⑱ Seat×1
⑧ 10mm Washers×4	⑲ Cover plate under the seat×1
⑨ Steering wheel×1    5mm Lock nut×1 $\varnothing 5\text{mm} \times 35\text{mm}$ Steering fixing bolt×1	⑳ Hood trim strip×1
⑩ Wrench×2	㉑ Gear box×2
⑪ $\varnothing 4\text{mm} \times 16\text{mm}$ Circular self-tapping screws×2	


Assembly of your new car is simple, provided you carefully follow the detailed diagram and refer to component part numbers to ensure they are fitted in the correct order as shown above.

**IMPORTANT!**  
Before first time use, charge the battery for at least 10 hours. Never charge the battery longer than 15 hours.


**PLEASE NOTE:** IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.  
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094




## INSTRUCTION OF THE PRODUCT ASSEMBLY DRAWING

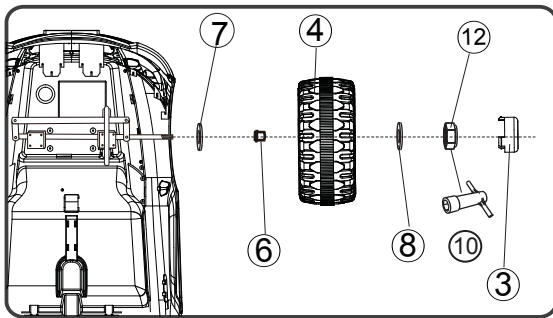 

 
1. Install the front wheels in accordance with the instruction in the left drawing. Follow the order, mount a 12mm washer, a wheel bush, the front wheel and a 10mm washer on one side of the front axle, then fix a 10mm lock nut with a wrench, and then mount the chrome wheel cap (note: the two front wheels should be installed in the same way).

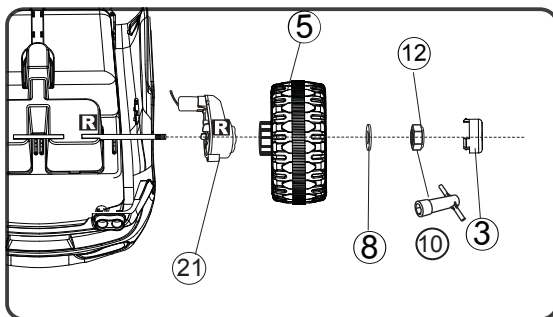

 2. Install the rear wheel in accordance with the instruction in the left drawing. Follow the order, install the gearbox (note: gearboxes are divided into a left one and a right one), the rear wheel and a 10mm washer, then affix the 10mm lock nut with a wrench, and then mount the chrome wheel cap (note: the two rear wheels should be installed in the same way).

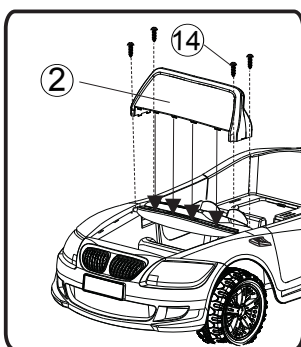


 3. Install the windshield in accordance with the instruction in the left drawing. Install the windshield at the corresponding location at the front of the dashboard, and use four 4mmX16mm flat self-tapping screws to affix it.

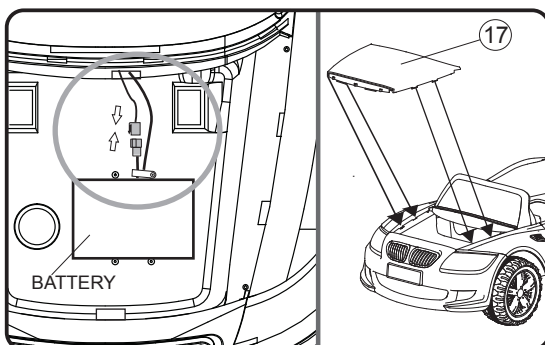


4. Install the hood in accordance with the instruction in the left drawing. First, insert the plug-in units in the hood, and then install the hood at the location indicated by the arrowhead in the left drawing. Make sure everything is secure.

 
**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.  
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

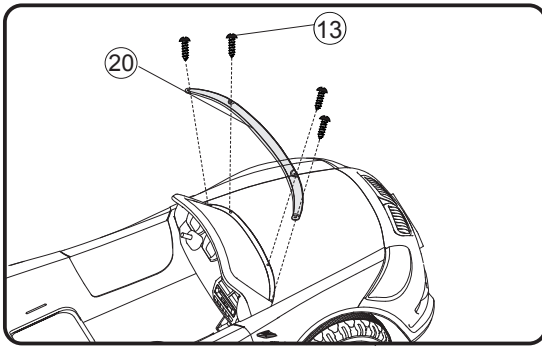

 
5. Install the hood trim strip in accordance with the instruction in the left drawing. Put the hood trim strip in front of the windshield, press it tightly against the hood, and then use four 4mmX12mm circular self-tapping screws to affix it.

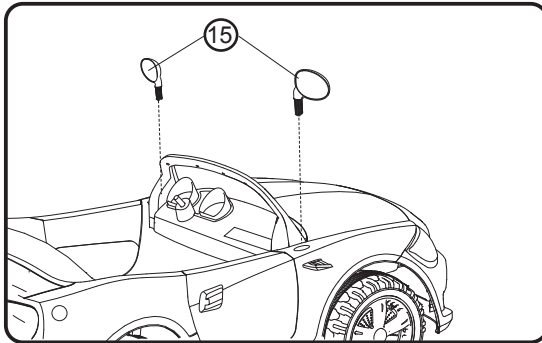

 
6. Install the rearview mirrors in accordance with the instruction in the left drawing. Insert the rearview mirrors (note: the rearview mirrors are divided into a left one and a right one) into the left and right holes on the two sides of the dashboard.

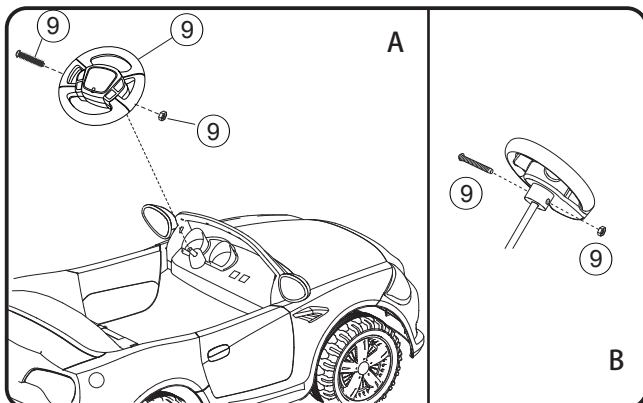

 
7. Install the steering wheel in accordance with the instruction in the left drawing. Use the screwdriver to remove the steering fixing bolt below the steering wheel, and then insert the steering wheel into the indicated location on the direction lever. As shown in FIG. B, use a 5mmX35mm steering fixing bolt to go through the direction lever and the fixation hole of the steering wheel, and then use a 5MM lock nut to affix it.

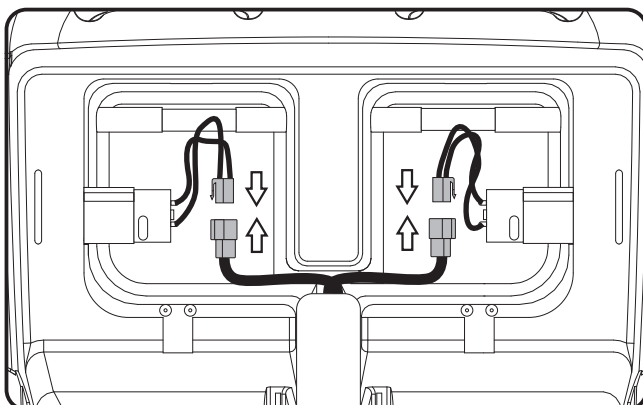

 8. Connect the wire of the motor in accordance with the instruction in the left drawing, and insert plug-ins of the motor in place.

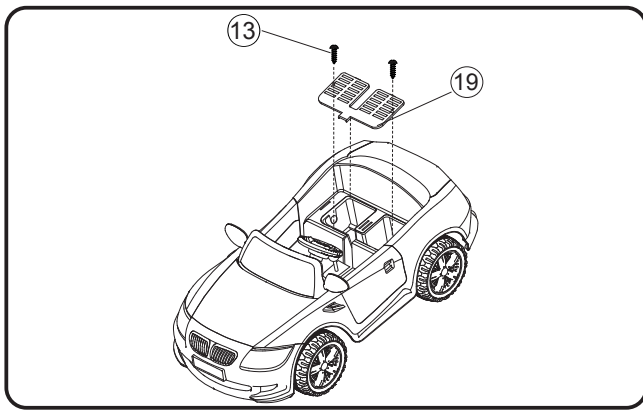

 9. Install the cover plate under the seat in accordance with the instruction in the left drawing. Place the cover plate under the seat at corresponding location, and use the 4mm×12mm circular self-tapping screws to affix it.

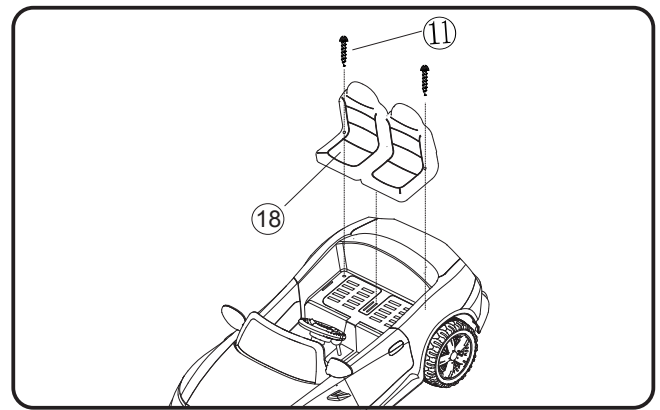

10. Install the seat in accordance with the instruction in the left drawing. Place the seat at corresponding location above the cover plate, and use the 4mm×16mm circular self-tapping screws to affix it.

## OPERATING FEATURES

 
Your car is fitted with 2 gearboxes containing 2 forward speeds and 1 reverse speed. The operating speed of your car can be controlled by the middle gear lever. Pushing it all the way forward will engage forward speed on high speed. Central position of gear lever will engage forward speed at low speed. Pushing your gear lever all the way back will operate reverse gear in low speed.

Your car is also fitted with an **ON/OFF** switch located on the dashboard. Switch must be in the on position to activate drive. In order to start your car, push gear lever forward into high speed position and place your foot onto the accelerator.

To stop your car, simply release your foot from the accelerator and this will engage the auto brake system.

Your car is not fitted with a manually operated brake.


Your car has a large turning radius. To ensure unwanted collisions with obstacles, it is recommended that you drive your car in a wide open area until you get fully used to its handling and steering capabilities.

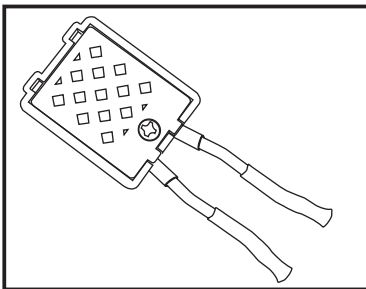

### Thermal Fuse

Your car is fitted with a thermal overload fuse.

 The function of this component is to protect the electrical circuit of your product. If the product is overloaded ( refer to maximum user weight ) or is used on a steep incline ( not recommended ) the thermal fuse will cut power supply to the motors and vehicle will stop. Thermal fuse will reset within 2 minutes and product function will resume as normal.

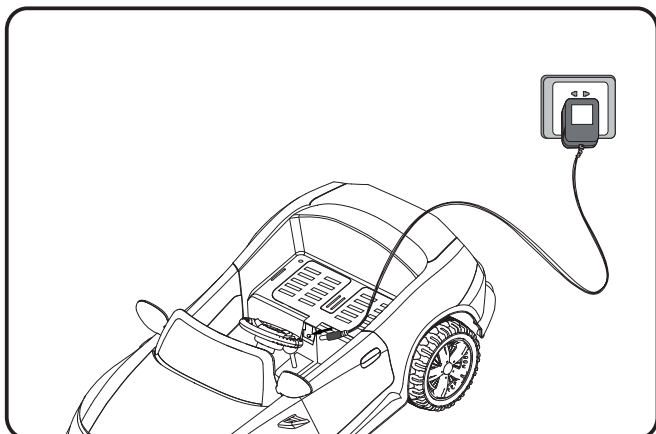

### Charging your electric car

Battery charging input socket is located at the bottom of the seat as shown in the image left. Plug charger output socket into input socket on your car as shown. Then plug AC adaptor /Charger into a standard 240V household power outlet. Battery should be charged for no longer than 15 hours first charge and each charge thereafter no less than 8-12 hours. Never allow your battery to run completely flat and always place battery on charger if vehicle starts to show signs of slowing down or erratic motion.

Battery charger used with the toy is to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage it must not be used until that damage has been repaired.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.**

**PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

## Product Specification

Suitable age grading	3+yrs
Usage temperature range	0-40 degrees C
Maximum user weight	40 KG
Speed	1.86-3.73/mph
Charger	Input AC 240V Output DC 12V 1000mA
Battery	12V 7AH×1
Charger time	8-12hrs
Battery life	Appro×300 charges

## Battery safety information

### Disposal Of Battery

#### Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycler, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.

## Charging tips

- 1.Charging of battery should always be performed by an adult.
- 2.Never run battery flat as this will decrease battery life.
- 3.It is quite normal for battery and charger to become very warm during charging cycle. Never charge battery while still warm after use.
- 4.To ensure proper life span of your battery while car is in storage, it is strongly advised to charge battery fully every 3 months.
- 5.Before charging the battery check for wear or damage to the battery, charger, the connectors and other parts. If any damage is found, charger should be repaired or replaced immediately. Do not use a damaged charger.
- 6.It is normal for the adaptor to feel warm during charging, but if the charger feels very hot, stop charging and check the battery and adaptor.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.  
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**



# Trouble Shooting Guide

## Car will not run of all.

Check all electrical connections and ensure there is no damage.

## Car is running slower than normal.

Stop use immediately and recharge battery.

If you are experiencing any further difficulties with the product, please contact  
HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094

## Safety warnings

### **WARNING:**

Contains small parts, sharp points and sharp edges. Adult assembly required.

### **WARNING:**

**Choking Hazard!** Contains small parts. Not for children under 3 years old!

1. Battery should only be charged by an adult.
2. Children should always be supervised when riding.
3. Product should only be assembled by an adult.
4. Car should not be ridden at night, near or around swimming pools, steep slopes or near any public roads.
5. Always ensure that product is stationary before switching from forward to reverse.
6. To avoid suffocation, keep all bags away from children. Please dispose of all plastic bags immediately.
7. Car should only be washed with a clean damp cloth.
8. Car should never be used in wet weather.
9. It is advisable to protect car from weather conditions when not in use.  
Do not leave outside.
10. Always wear a helmet and protective clothing when riding.
11. Warranty period is 12 Months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.  
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**